



Notes:

- 1/ Jumper for CAN bus termination
- 2/ Populate resistor if input unused
- 3/ Jumper select for limit switch pull resistor
- 4/ User configurable current sense resistor - default is 2.7K

